

PART# // BC0021

DESCRIPTION // HONDA B18A/B STAGE 2


	INTAKE	EXHAUST
ADVERTISED DURATION	280°	280°
ACTUAL CAM LIFT (in/mm)	.470"/ 11.94mm	.470" / 11.94mm
ROCKER ARM RATIO	1.75:1	1.75:1
CENTERLINE	103°	111°
LOBE SEPERATION	107°	
DURATION AT 0.050" CAM	194°	194°
DURATION AT 0.050" VALVE	204°	204°
VALVE CLEARANCE	.008" / .20mm solid	.010" / .25mm solid
RECOMMENDED SPRING KIT	BC0020 or BC0020S	

CANACHAET TINAINIC
CAMSHAFT TIMING
AT 0.050" VALVE LIFT

	OPEN	CLOSES
INTAKE	1° ATDC	25° ABDC
EXHAUST	33° BBDC	9° BTDC



BC does not recommend using synthetic oil during break-in or operartion. Follow OEM manufacturer's torque sequence and specifications. Use liberal amount of aftermarket engine assembly lube during installation. Check follower or bucket surfaces for abnormal wear and/or scuffing. On initial start-up and break-in run engine at 1500-2500 rpm for 20 minutes. Camshafts damaged by improper installation, excessive spring pressure or retainers contacting valve guides or seals are void from warranty. Not legal for sale or use on emission controlled motor vehicles.

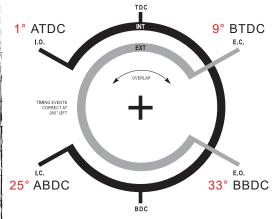

NOTES

- Do not use impact/wrench or gun to torque cam gear to cam.
- Torque cam gear bolt to 22 ft lbs using calibrated wrench.
- Aftermarket cams are chilled cast and required less torque.
- If using aftermarket gears, make certain the cam gear bolt is able to engage 3 to 4 threads into body of cam.
- Thicker cam gears will cause the cam gear bolt to only engage the threads in the snout, increasing chance of breakage.

BRIAN**CROWER**.COM 619.749.9018